
## **\$Powerwinch**

## OWNER'S MANUAL

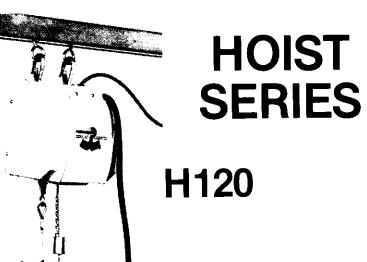

#### **A** WARNING **A**

H-120

HOIST MUST BE PLUGGED INTO
110-120 VOLT 3 WIRE GROUNDED OUTLET

#### **A**CAUTION

- · Read Owner's Manual Before Use
- · Keep Hands Clear of Cable Spool
- Stand Away From Unit When In Use
- Do Not Use This Unit To Lift People Or Animals
- We Recommend The Use of Powerwinch Accessories and Replacement Parts

1TON

## **MAXIMUM CAPACITY**

- 2000 lbs. Double Line with Pulley Block
- 1000 lbs. Single Line
- Not To Be Used For Lifting Humans

#### installation

The Powerwinch Hoist may be permanently mounted, using the holes provided in the base plate of the unit. For extra safety, use three bolts. The Hoist may be hung from an overhead trolley, using the dual hooks provided (79033 in exploded views). These dual hooks prevent the unit from excess swaying. In this fairly rigid position, the cable will wind evenly on the drum for more satisfactory operation.

When the hoist is properly mounted, simply plug into your power source. On the 110 V. model (H-120) a six foot conductor cable is provided.

#### **A** WARNING **A**

ALWAYS MOUNT HOIST VERTICALLY. THE HOIST WILL NOT OPERATE IF MOUNTED HORIZONTALLY. ANY MODIFICATION COULD RESULT IN IMPROPER OPERATION OR PERSONAL INJURY.

#### **GROUNDING INSTRUCTIONS**

Hoist should be grounded while in use to prevent the user from electric shock. The hoist is equipped with an approved three conductor cord and three prong grounding-type plug to fit the proper grounding-type receptacle. (Fig 1) The green conductor in the cord is the grounding wire. <a href="NEVER">NEVER</a> connect the green wire to a live terminal.

### facts about your hoist

Your hoist is designed for non-production, non-continuous use. DO NOT OVERUSE. The maximum time per use is five minutes PER HOUR.

ALLOW THE MOTOR TO COOL ONE HOUR BETWEEN MAXIMUM USES.

The hoist will lift and lower a maximum of 2,000 lbs. using a double line. For longest life, single line hoisting should not be greater than 700 lbs.

25 feet of 7/32" cable is the standard amount of the drum. When double-lining, this allows for a 12 foot lift.

ALWAYS KEEP AT LEAST 4 TURNS OF CABLE ON THE DRUM TO PREVENT THE CABLE FASTENER FROM PULLING OUT.

THE CABLE MUST ALWAYS WRAP FROM THE UNDERSIDE OF THE DRUM. (It must wrap between the drum and the base, not between the drum and the cover.)

If the cable is completely pulled out with the power on, the cable may reverse. If this happens, the brake will not hold the load. To correct this situation, press the "up" button and be sure the cable wraps under the drum.

When the cable is lifting or lowering without a load, put at least a 10 lb. weight or pull on the cable at all times. This will keep the cable winding evenly.

When double lining: The cable must be doubled and the pulley block and hook used. The hook on the end of the cable may be dead-ended in the first hole in the base plate of the unit. This gives a straight line pull which allows the cable to wind evenly. (see Fig. 2)



A friction brake holds the load when the power is off. For longest life, you must adjust the brake to as loose a position as possible—so that the load doesn't slip. For heavy loads, tighten the inner nut, left hand. (See Fig. 3) For lighter loads loosen the inner nut as much as possible to extend motor life. When adjustment has been made, the inner and outer nuts should be locked together to prevent accidental loosening.

A shut-off switch (H120 only) is provided which automatically stops the power on the "up" cycle. This prevents the hook or the pulley block from going into the hoist and damaging it.

#### A WARNING A

DO NOT DISCONNECT THE LIMIT SWITCH BECAUSE THE HOIST WEIGHT COULD WIND INTO THE DRUM CAUSING HOIST DAMAGE AND PERSONAL INJURY.

#### making minor repairs

#### Replacing motor

- 1. Hand turn gears of old motor gently back and forth. Note slight backlash. Gears of new motor should have about same degree of play.
- 2. Note where wire leads are connected so that proper connections will be made on new motor. Then disconnect leads.
- 3. Back off screws on motor bands and remove bands.
- 4. Take out old motor.
- 5. Put new motor in place, taking care to see that gears are meshed properly.
- 6. Fasten motor bands and connect wire leads.
- 7. Check new motor for correct backlash. Gears should not be too tight or too loose. Adjust by increasing or decreasing thickness of shims under motor.
- 8. Lubricate the gears once a year with a lithium base grease.

#### POWERWINCH SAFETY RULES



WARNING: When using your hoist, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or personal injury including the following items. Read all instructions and save them for further reference.

- 1. READ YOUR OWNER'S MANUAL. ONLY let people who know the Powerwinch Safety Rules use your hoist
- 2. ALWAYS ground your hoist. Your hoist is equipped with a three prong plug, it should be plugged into a three hole electrical outlet.
- 3. **NEVER** use your hoist to lift or move people or animals.
- 4. Keep the hoisting area free of people. Only let adults use the hoist.
- 5. Always wire your hoist (12V) with the circuit breakers. There could be overheating, which could cause a fire.

#### A WARNING A

ALWAYS MOUNT HOIST VERTICALLY, THE HOIST WILL NOT OPERATE IF MOUNTED HORIZONTALLY, ANY MODI-FICATION COULD RESULT IN IMPROPER OPERATION OR PERSONAL INJURY.

6. Always inspect the entire cable before use to check for fraying or kinking. The cable could break if it is frayed or kinked.

> (frayed-wear by rubbing) (kinked-short tight twist or curl)

7. If you need to replace the cable ALWAYS replace it with one of the same size and strength. (Use cable strength are carefully matched. Your warranty is VOID if any other cable is used.


- 8. **NEVER** use rope instead of cable. It will break, causing possible damage.
- 9. Only attempt to lift as much as your hoist is rated to lift.
- 10. Do Not use your hoist to hold or support the load once you finish the job.
- 11. NEVER wrap the hoist cable around the load. This causes cable kinking which breaks down cable strength. Use an ECOSTRAP or a chain.
- 12. Always wear leather gloves when handling the cable. Steel cable can be hard on hands.
- 13. Keep your hands, fingers and feet clear of the drum area. (where cable winds)
- 14. ALWAYS unplug the conductor cord to prevent accidental starting when starting up, adjusting or making repairs to your hoist.
- 15. **DONT** expose hoist to rain or use in damp or wet locations. Do not use hoist in presence of flammable liquids or gases.
- 16. NEVER stand under a load.
- 17. **NEVER** operate the unit more than 5 minutes per hour.


#### A WARNING A

Powerwinch cable ONLY!) The hoist's rating and the ALWAYS STAND CLEAR OF THE HOIST AREA. IF THE CABLE BREAKS, SERIOUS INJURY COULD OCCUR. **NEVER STAND UNDER THE LOAD.** 

> NOTE: Any LIMITED WARRANTY which may apply to this product may be VOID if said product has been damaged due to accident, unreasonable use, neglect, modification, or failure to observe these safety rules.

<u>H120</u> WIRING DIAGRAM

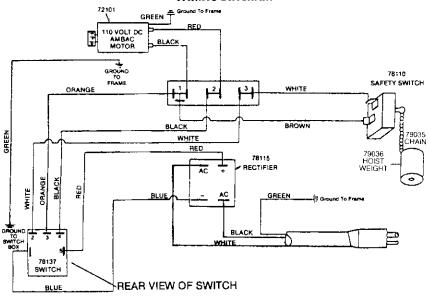

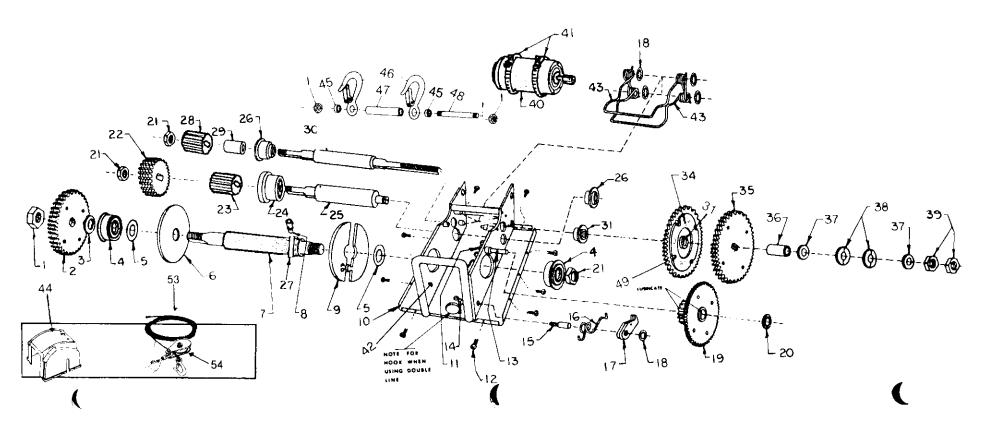

## **REPAIR PARTS LIST H-120**

NO.   NO.   DESCRIPTION	
2 71753 Drum gear 3 71823 Spacer 4 71605 Bearing 5 71820 Bearing spacer 6 71952 Drum shaft flange 7 71403 Drum shaft 8 71858 7/32 cable fastener 9 71954 Drum flange-split 10 70177 Base pan 11 79713 1st gear shaft nut ½-20 thin 12 79587 Self tapping screw 10-24-3/8" 13 71102 1st gear shaft 14 79028 3/8-16 thin nut 15 75600 Pawl stud 16 71903 Pawl spring 17 73853 Pawl 18 70204 Retainer 19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	QTY USED
3       71823       Spacer         4       71605       Bearing         5       71820       Bearing spacer         6       71952       Drum shaft flange         7       71403       Drum shaft         8       71858       7/32 cable fastener         9       71954       Drum flange-split         10       70177       Base pan         11       79713       1st gear shaft nut ½-20 thin         12       79587       Self tapping screw 10-24-3/8"         13       71102       1st gear shaft         14       79028       3/8-16 thin nut         15       75600       Pawl stud         16       71903       Pawl spring         17       73853       Pawl         18       70204       Retainer         19       71752       Drive gear         20       79852       Split ring retainer         21       79712       ½-20 nut         22       71708       Idler gear         23       71704       Pinion gear         24       71606       Bearing         25       71301       Intermediate shaft         26       716	3
4       71605       Bearing         5       71820       Bearing spacer         6       71952       Drum shaft flange         7       71403       Drum shaft         8       71858       7/32 cable fastener         9       71954       Drum flange-split         10       70177       Base pan         11       79713       1st gear shaft nut ½-20 thin         12       79587       Self tapping screw 10-24-3/8"         13       71102       1st gear shaft         14       79028       3/8-16 thin nut         15       75600       Pawl stud         16       71903       Pawl spring         17       73853       Pawl         18       70204       Retainer         19       71752       Drive gear         20       79852       Split ring retainer         21       79712       ½-20 nut         22       71708       Idler gear         23       71704       Pinion gear         24       71606       Bearing         25       71301       Intermediate shaft         26       71608       Bearing         27       7	1
5 71820 Bearing spacer 6 71952 Drum shaft flange 7 71403 Drum shaft 8 71858 7/32 cable fastener 9 71954 Drum flange-split 10 70177 Base pan 11 79713 1st gear shaft nut ½-20 thin 12 79587 Self tapping screw 10-24-3/8" 13 71102 1st gear shaft 14 79028 3/8-16 thin nut 15 75600 Pawl stud 16 71903 Pawl stud 16 71903 Pawl spring 17 73853 Pawl 18 70204 Retainer 19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	1
6 71952 Drum shaft flange 7 71403 Drum shaft 8 71858 7/32 cable fastener 9 71954 Drum flange-split 10 70177 Base pan 11 79713 1st gear shaft nut ½-20 thin 12 79587 Self tapping screw 10-24-3/8" 13 71102 1st gear shaft 14 79028 3/8-16 thin nut 15 75600 Pawl stud 16 71903 Pawl spring 17 73853 Pawl 18 70204 Retainer 19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1″ drum collar	2
6       71952       Drum shaft flange         7       71403       Drum shaft         8       71858       7/32 cable fastener         9       71954       Drum flange-split         10       70177       Base pan         11       79713       1st gear shaft nut ½-20 thin         12       79587       Self tapping screw 10-24-3/8"         13       71102       1st gear shaft         14       79028       3/8-16 thin nut         15       75600       Pawl stud         16       71903       Pawl spring         17       73853       Pawl         18       70204       Retainer         19       71752       Drive gear         20       79852       Split ring retainer         21       79712       ½-20 nut         22       71708       Idler gear         23       71704       Pinion gear         24       71606       Bearing         25       71301       Intermediate shaft         26       71608       Bearing         27       79088       1" drum collar	2
8 71858 7/32 cable fastener 9 71954 Drum flange-split 10 70177 Base pan 11 79713 1st gear shaft nut ½-20 thin 12 79587 Self tapping screw 10-24-3/8" 13 71102 1st gear shaft 14 79028 3/8-16 thin nut 15 75600 Pawl stud 16 71903 Pawl spring 17 73853 Pawl 18 70204 Retainer 19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	1
9 71954 Drum flange-split 10 70177 Base pan 11 79713 1st gear shaft nut ½-20 thin 12 79587 Self tapping screw 10-24-3/8" 13 71102 1st gear shaft 14 79028 3/8-16 thin nut 15 75600 Pawl stud 16 71903 Pawl spring 17 73853 Pawl 18 70204 Retainer 19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	1
10 70177 Base pan 11 79713 1st gear shaft nut ½-20 thin 12 79587 Self tapping screw 10-24-3/8" 13 71102 1st gear shaft 14 79028 3/8-16 thin nut 15 75600 Pawl stud 16 71903 Pawl spring 17 73853 Pawl 18 70204 Retainer 19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	1
11 79713 1st gear shaft nut ½-20 thin 12 79587 Self tapping screw 10-24-3/8" 13 71102 1st gear shaft 14 79028 3/8-16 thin nut 15 75600 Pawl stud 16 71903 Pawl spring 17 73853 Pawl 18 70204 Retainer 19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	1
12 79587 Self tapping screw 10-24-3/8" 13 71102 1st gear shaft 14 79028 3/8-16 thin nut 15 75600 Pawl stud 16 71903 Pawl spring 17 73853 Pawl 18 70204 Retainer 19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	1
13 71102 1st gear shaft 14 79028 3/8-16 thin nut 15 75600 Pawl stud 16 71903 Pawl spring 17 73853 Pawl 18 70204 Retainer 19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	1
14       79028       3/8-16 thin nut         15       75600       Pawl stud         16       71903       Pawl spring         17       73853       Pawl         18       70204       Retainer         19       71752       Drive gear         20       79852       Split ring retainer         21       79712       ½-20 nut         22       71708       Idler gear         23       71704       Pinion gear         24       71606       Bearing         25       71301       Intermediate shaft         26       71608       Bearing         27       79088       1" drum collar	9
15 75600 Pawl stud 16 71903 Pawl spring 17 73853 Pawl 18 70204 Retainer 19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	1
16       71903       Pawl spring         17       73853       Pawl         18       70204       Retainer         19       71752       Drive gear         20       79852       Split ring retainer         21       79712       ½-20 nut         22       71708       Idler gear         23       71704       Pinion gear         24       71606       Bearing         25       71301       Intermediate shaft         26       71608       Bearing         27       79088       1" drum collar	1
17       73853       Pawl         18       70204       Retainer         19       71752       Drive gear         20       79852       Split ring retainer         21       79712       ½-20 nut         22       71708       Idler gear         23       71704       Pinion gear         24       71606       Bearing         25       71301       Intermediate shaft         26       71608       Bearing         27       79088       1" drum collar	1
18       70204       Retainer         19       71752       Drive gear         20       79852       Split ring retainer         21       79712       ½-20 nut         22       71708       Idler gear         23       71704       Pinion gear         24       71606       Bearing         25       71301       Intermediate shaft         26       71608       Bearing         27       79088       1" drum collar	1
19 71752 Drive gear 20 79852 Split ring retainer 21 79712 ½-20 nut 22 71708 Idler gear 23 71704 Pinion gear 24 71606 Bearing 25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	1
20       79852       Split ring retainer         21       79712       ½-20 nut         22       71708       Idler gear         23       71704       Pinion gear         24       71606       Bearing         25       71301       Intermediate shaft         26       71608       Bearing         27       79088       1" drum collar	9
21       79712       ½-20 nut         22       71708       Idler gear         23       71704       Pinion gear         24       71606       Bearing         25       71301       Intermediate shaft         26       71608       Bearing         27       79088       1" drum collar	1
22     71708     Idler gear       23     71704     Pinion gear       24     71606     Bearing       25     71301     Intermediate shaft       26     71608     Bearing       27     79088     1" drum collar	1
23       71704       Pinion gear         24       71606       Bearing         25       71301       Intermediate shaft         26       71608       Bearing         27       79088       1" drum collar	3
24       71606       Bearing         25       71301       Intermediate shaft         26       71608       Bearing         27       79088       1" drum collar	4
25 71301 Intermediate shaft 26 71608 Bearing 27 79088 1" drum collar	1
26 71608 Bearing 27 79088 1" drum collar	1
27 79088 1" drum collar	1
, , , , , , , , , , , , , , , , , , , ,	2
	1
	1
29 71817 2nd shaft spacer 30 71204 Rear shaft	1
31 71607 Real shart	1
34 73604 Clutch lining	2
35 71756 Gear	1
36 71825 Clutch adjustment spacer	1
37 71822 Spacing washer	6
38 71904 Brake spring washer	2
39 79714 ½-20 left hand nut	2
40 72101 Motor with gear	1
41 72203 Motor strap	2
42 70105 Frame	1
43 70206 Levelwind spring	ż
44 BG2169 Case, black	2 1
45 71829 End spacer	, 2
46 79033 Hook	2
47 71827 Hook support shaft spacer	1
48 71500 Hook support shaft	1
49 71749 Brake gear	1
53 71872 7/32 x 25 assy.	1
54 79133 Pulley block with swivel hook	1
NS 78019 110V lead w/plug	
NS 78110 Safety switch	
NS 78310 Remote control switch assy.	
NS 78554 7 ft. remote cord	
NS 79038 Box for remote control	
NS 78137 Switch for remote control	
NS 78114 Bush strain relief	2
NS 79710 Hex nut 3/8-16	1
NS 79851 1/2" Retaining ring	1
NS 79701 10-32 Hex nut	•
	4
NS 79603 3/8-16 x 1-1/2"	1 1

#### LIMITED WARRANTY

- A. This Limited Warranty is given by the Powerwinch Division of the Scott Fetzer Company (the "Company") to the original purchaser (the "Purchaser") of a Powerwinch Product (the "Product") specified in this manual. This Limited Warranty is not transferable to any other party.
- B Responsibilities of the Company under this Limited Warranty:
  - Repair or replace (at the discretion of the Company) any part or parts of the Product found by the Company to be defective within a two (2) year period from date of purchase.
  - 2 The Company will pay the transportation charge for shipment back to the Purchaser of any Product received for legitimate Warranty repair.
- C. Responsibilities of the Purchaser under this Limited Warranty:
  - 1- Complete (fully and accurately) and return to the Company the Warranty card included in the box. Otherwise Purchaser will have to show dated proof of purchase to qualify for service under the provisions of this Limited Warranty.
  - 2 Promptly notify the Seller or the Company of any claim hereunder.
  - 3. At the Option of the Company, return the Product to the Company for inspection. Authorization must be given Prior to any Product return. Call the Company at i-800-793-4793; or write the Company at .2.268 Fairview Blvd; Fairview; TN 3706.2; for authorization and complete instructions on how to return the Product directly to the Company.
  - Use reasonable care in maintenance, operation, use and storage of the Product in accordance with the instructions contained in the Owner's Manual.

- Have Warranty work performed by a dealer or representative approved by the Company.
- Except as provided in B.2, transportation charges are the responsibility of the Purchaser.
- D. This Limited Warranty covers:
  - 1. Defects in workmanship or materials.
  - 2 Any part or parts of the Product sold or manufactured by the Company
- E. This Limited Warranty does not cover:
  - 1. Any failure that results from improper installation of the Product.
  - Any failure that results from accident, Purchaser's abuse, neglect, modification, improper maintenance, or failure to operate and use the Product in accordance with the instructions provided in the Owner's Manual supplied with the Product.
- F. THERE IS NO OTHER EXPRESS WARRANTY. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANT-ABILITY AND FITNESS FOR A PARTI-CULAR PURPOSE, ARE LIMITED TO TWO (2) YEARS FROM DATE OF PURCHASE. THIS IS THE EXCLUSIVE REMEDY AND ANY LIABILITY FOR ANY AND ALL INCIDENTAL OR CONSE-QUENTIAL DAMAGES OR EXPENSES WHATSOEVER IS EXCLUDED. Some states do not allow limitations on how long an implied warranty lasts, or do not allow exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state

Powerwinch reserves the right to alter specifications on any product without notice.

Call 1-800-793-4793 and ask for our Service Department. We will give you the name of the nearest warranty repair center in your area.

#### **NON-WARRANTY REPAIRS**

If you are unable to service your winch yourself, call 1-800-793-4793 and ask for our service department. We will give you the name of the nearest repair center in your area.

When sending your unit to the nearest repair center, give your name, address, and any pertinent information on your winch problem. Please pack carefully so as to avoid damage in shipment.



a Scott Fetzer company

.2.268 Fairview Blvd, Fairview, TN 3706.2 Telephone 1-800-793-4793

# MOUNTING HOLE PATTERN H-120 HOIST

